


HOW TO PLAYAWAY - BUTTON FUNCTIONALITY

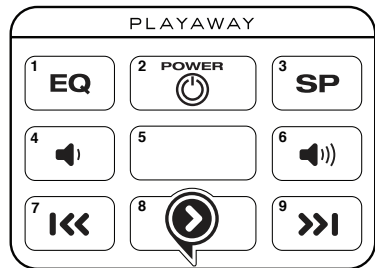

**1 EQ/Equalizer:**

Each press on the EQ button rotates a new EQ mode.

- NONE = No EQ setting
- LOUD = Overall sound is boosted
- LOW = Bass is boosted
- HIGH = Treble is boosted
- CLEAR = High end sound is amplified
- HIFI = Sound is mixed for best performance

**2 Power:**

- a. Press the POWER button once to turn unit on
- b. Press the POWER button again and hold for 3 seconds to power off - release button after unit counts down and "OFF" appears on the LCD screen

**3 Speed (Audiobook Content):**

- a. Each press of the SP button rotates to a new speed mode. There are 3 options:
  - SPD = Normal
  - SPD+ = Fast
  - SPD++ = Fastest

**Shuffle Play (Music Content):**

- a. If your Playaway is pre-loaded with music content, the SP button enables/disables shuffle play functionality
- b. Pressing the SP button once will enable Shuffle Play mode and cause a randomization of playback

**4 Volume Down:**

- a. Each press of the Volume Down button will decrease the volume one level
- b. Press and HOLD Volume Down to accelerate volume decrease

**5 LCD Screen:**

- a. Displays the operating status of the Playaway
- b. Battery level indicated by icon
  - = Full battery
  - = Replace battery

**6 Volume Up:**

- a. Each press of the Volume Up button will increase the volume one level.
- b. Press and HOLD Volume Up to accelerate volume increase

**7 Reverse:**

- a. Press the Reverse button once to reverse one chapter/track ("track" refers to music content)
- b. Press and hold the Reverse button to fast rewind

**8 Play/Pause:**

- a. Press the button once to Play
- b. When in play mode, press the button again to Pause playing or resume Play

**9 Forward:**

- a. Press the Forward button once to advance one chapter/track ("track" refers to music content)
- b. Press and hold the Forward button to fast forward

**CONSUMER INFORMATION**

Need assistance or additional info?  
 Visit us online at [www.playawaydigital.com](http://www.playawaydigital.com).  
 Or call us at (877) 893-0808.

➤ Please keep this card for reference